


Original user manual

Jasopels MAXI trolley

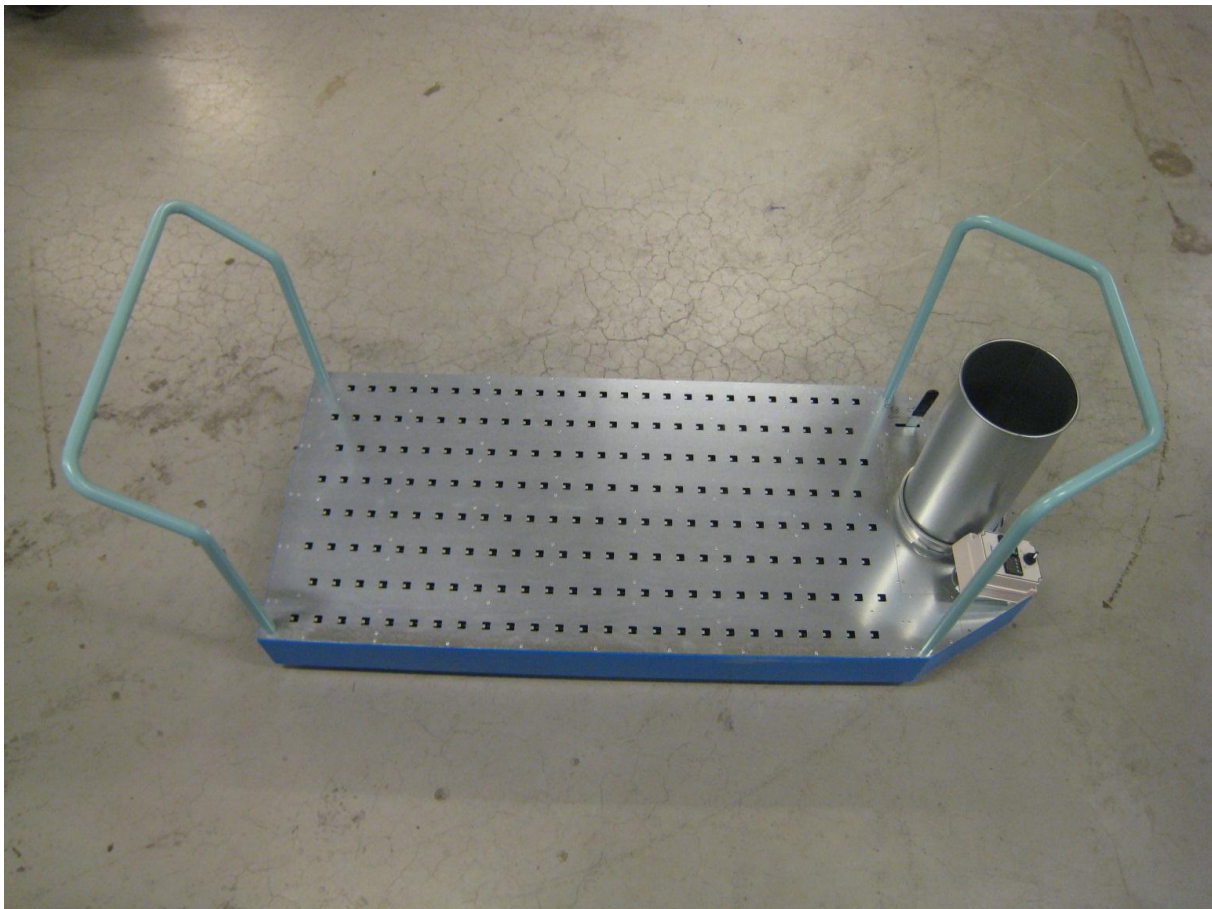

1. Declaration of Conformity

EU Declaration of Conformity

Manufacturer: Jasopels A / S Tel. +45 76 94 35 00
Address: Fabriksvej 19, DK-7441 Bording

Machine: Jasopels MAXI trolley
Type: 3450-2777

Jasopels A / S declares that this product is in accordance with the following EU directives:

2006/42/EC

Furthermore, we declare that the following harmonized standards have been applied:

EN 60204-1

DS/EN 12100 : 2005

DS/EN 14121-1

DS/EN 14121-2

Place and date: Bording 1st November 2012

Name: CEO Poul Bach

A handwritten signature in black ink, appearing to read "Poul Bach".

2. Table of contents

1. Declaration of Conformity.....	2
2. Table of contents	3
4. Symbol explanation.....	5
5. Introduction to the machine	6
6. Start-up	7
6.1 Programming and Timer function ...	8
7. Maintenance	9
8. Technical data.....	9
9. User's note	10

3. Preface

- This User Manual is an important part of your new machine. Read the manual carefully and use it as a reference book.
- This manual contains important information about safety and the proper use of the machine.
- The manual should be stored with the machine. It is important that the user manual is supplied with the machine upon resale and loan out.
- The owner of the machine must make sure that the operator, service personnel and others who have access to the machine are instructed on the proper use and handling of the machine. Read this user's manual for more information.

4. Symbol explanation

- Please read this manual and follow the instructions. In order to emphasize certain information, the following expressions are used:



- Note!

A triangle containing an exclamation mark is a warning symbol that warns you of important instructions or information concerning this machine.



- Danger!

A triangle containing a lightning bolt is a warning symbol that warns of "High Voltage"



- Warning!

A triangle containing a warning about an entanglement and crush hazard.

5. Introduction to the machine

- There is a place for 200 boards on Jasopels MAXI trolley. It is easy to work with skins using Jasopels MAXI trolley.
- The machine can be supplied with air blower in the drying box, but you can also connect it to an existing drying installation.
- The machine can be also supplied with a Timer function which allows to program the drying time. Here you have a possibility to choose an individual program for males and females.
- Jasopels MAXI trolley is adapted to Jasopels automatic skin remover.
- The machine can be cleaned a high pressure cleaner.
- The machine is simple and easy to operate, yet the “Original user manual” must be read thoroughly before the machine is placed in service.

Note!

- The owner of the machine must make sure that the operator, service personnel and others who have access to the machine are instructed on the proper use and handling of the machine.
- The machine may only be used for the purpose it is designed for. The CE Declaration lapses upon any other use of the machine.
- If any problems occur with the machine or its operation, the machine must be properly shut off before correcting the problem, unless the correction can be made using the machine’s control buttons.
- The user manual must always be kept available for the operator.



6. Start-up

- Before the machine can be used, make sure that it is leveled on a flat, stable surface without tilting.

DANGER!

Always disconnect the power supply before maintenance, cleaning and other services are performed on the machine.



- The boards are placed in the holes in the bottom of the trolley. The boards must be then locked with the handle which is placed next to the blower. If Maxi trolley is placed inside Skin Loosener or Skin Remover, the boards must be locked.

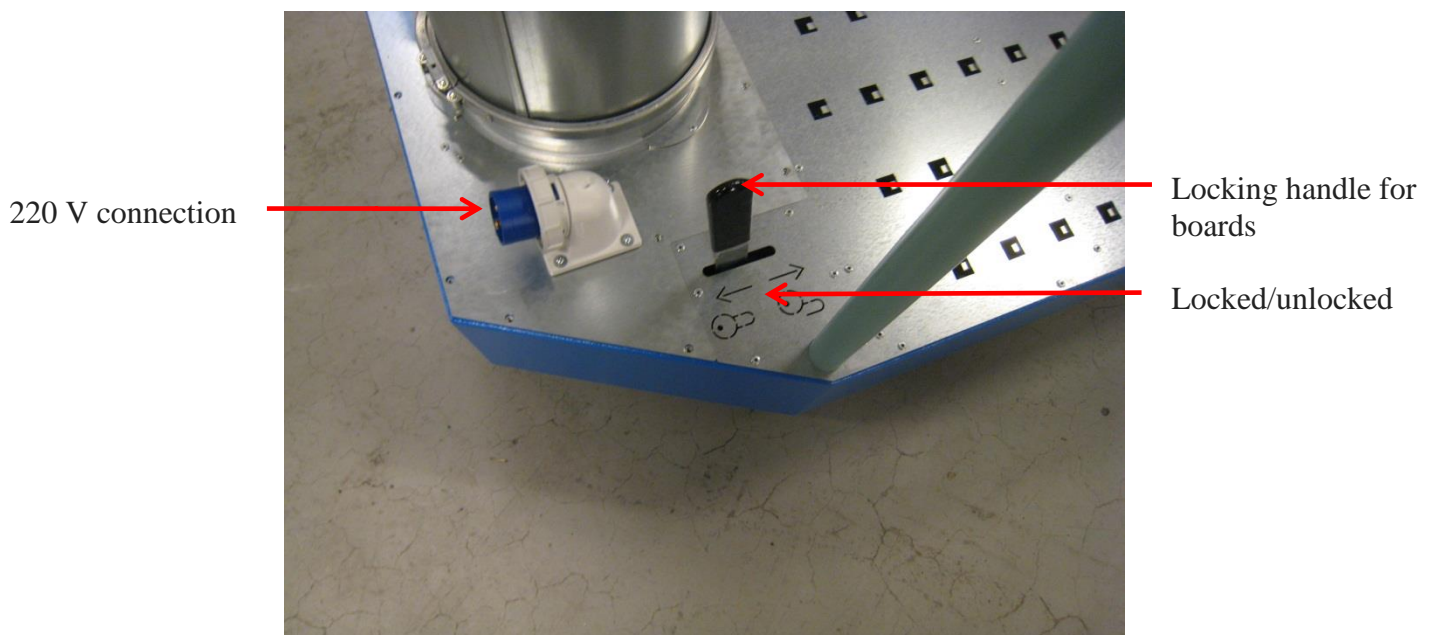


Fig. 1 Locking handle and electrical connection

- The machine's blower is connected to a 220 V power supply. To turn the machine off you need to unplug it.

6.1 Programming and Timer function

- For machines equipped with the Timer function there is a possibility to decide on the drying time for skins. This function also enables the user to check the remaining drying time on the display.

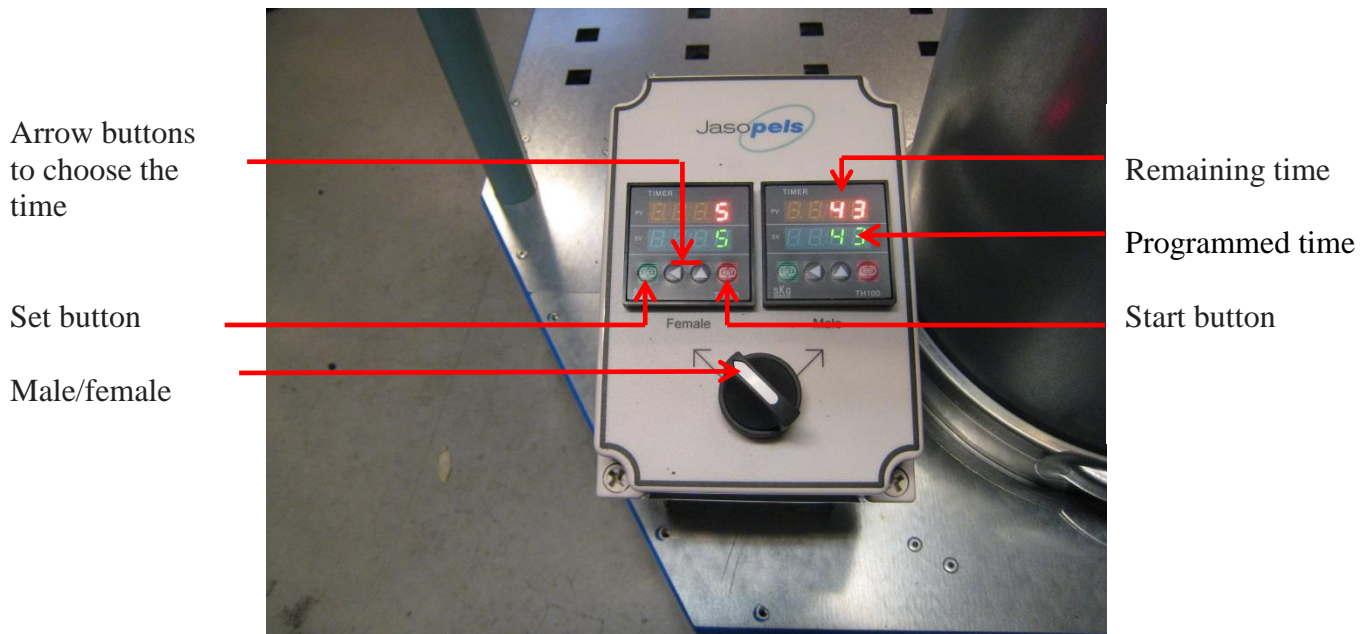


Fig. 2 Timer's operation buttons

- Programming is carried out in the following way: 1. Choose the program for male/female with the knob. 2. Press the green **"SET"** button and the numbers in the green display will start to blink. The time is programmed by pressing **"ARROWS"**. 3. Finish programming by pressing **"SET"** and the time settings are saved.
- The program is started/restarted by pressing the red **"RST"** button.
- The red numbers show the remaining time in the program.

7. Maintenance

- The machine can be washed with a high pressure cleaner.

DANGER!

Always disconnect the power supply before maintenance, cleaning and other services are performed on the machine.



8. Technical data

- Power supply: 1 x 220 V + PE 3-pole CEE plug
- Power consumption: 220 W
- Dimensions:
 - Height: 92 cm
 - Length: 200 cm
 - Width: 81 cm

Noise

It is estimated that the blower does not emit more noise than it is permitted, as you can lead a normal conversation in the direct proximity of the machine.

10. User's note